



Exchange Catalog

WESTAIR.COM | 800.777.4926

4300 S. KENNEDY ST. BOISE, ID 83705

WELCOME TO WESTERN AIRCRAFT

Based in Boise, Idaho, Western Aircraft is one of the largest aircraft services companies in the Western United States, offering maintenance, aircraft sales, avionics sales and installation, aircraft parts sales, FBO services, airline fueling, aircraft charters and aircraft management.

Western Aircraft began as the corporate flight department for the Morrison Knudsen Corporation (MK) more than 60 years ago. In 1957, MK responded to an overwhelming need for aircraft repair services by applying for and receiving its first FAA Certified Repair Station Certificate. During the 1980s, three more hangars were added, and the company became a wholly owned subsidiary of Morrison Knudsen Corporation incorporated under the name of Western Aircraft Inc.

In 1995, Al Hilde, Jr. and Allen Hoyt purchased the company from Morrison Knudson. Over the next 12 years, the company became the world's largest PC-12 dealer and an Authorized Falcon Service Center among other things. In July 2007, the company was purchased by Greenwich AeroGroup. On-going improvements and investments in people, training, tooling, technology and facilities have helped us to offer our customers personalized service and unsurpassed technical expertise.

We look forward to working with you!



OTC PART SALES TEAM



MARTY CABELLO
Parts Sales Representative
208.338.1868
martyc@westair.com



WADE HUSTON
Parts Sales Representative
208.385.5112
wadeh@westair.com



AARON MURPHY
Parts Sales Representative
208.338.1821
aaronm@westair.com



KELLY SMITH
Parts Sales Representative
208.385.5126
kellys@westair.com



BEV PATTERSON
Parts Sales Representative
208.338.1873
Bpatterson@westair.com



SCOTT SPIERS
Parts Sales Representative
208.338.1882
sspiers@westair.com



ERIC WRAZIN
Parts Sales Representative
208.338.1881
ericw@westair.com

 
 


JASON SCOTT
Parts Sales Representative
208.338.1866
jasons@westair.com



JACQUELINE RAMBACAL
OTC Outside Sales Manager
989.721.0919
jacqueline@westair.com

**CALL US AT
800.777.4926
OR EMAIL US AT
PARTS@WESTAIR.COM**

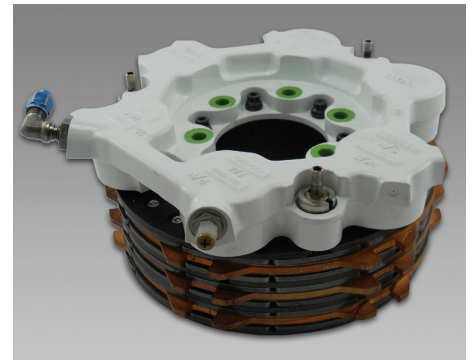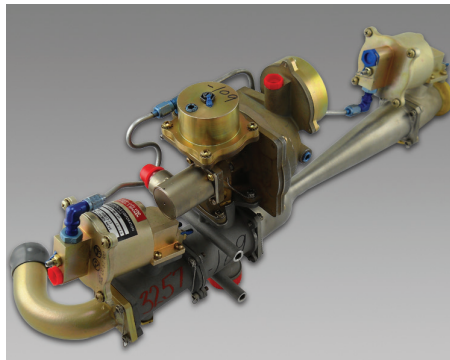

01-0790044-54	ANTI COLLISION BEACON	101-380025-21	FLOW CONTROL VALVE
01-0790044-55	ANTI COLLISION BEACON	101-380096-1	BRAKE ASSEMBLY
011035	COOLING FAN	101-381000-9	VALVE ASSEMBLY
011099	FAN – ROTRON	101-381011-13	VALVE ASSEMBLY-BLEED AIR SHUT OFF
030-24400	BRAKE ASSEMBLY	101-381012-7	VALVE ASSEMBLY-BLEED AIR SHUTOFF
065-00056-0059	PITCH SERVO	101-384025-23	WINDSHIELD ASSEMBLY LH
066-03137-3100	EFIS INDICATOR	101-384025-24	WINDSHIELD ASSEMBLY RH
1/2-2-81-306	TRANSMITTER	101-384032-3	VALVE ASSY
100-384054-1	VERTICAL SPEED INDICATOR	101-384032-7	VALVE ASSY-SHUTOFF,OXYGEN
100-389015-5	OIL COOLER	101-384100-1	VENT BLOWER ASSEM
100-524073-1	MOTOR AND GEARBOX ASSY-FLAP DRIVE	101-384107-1	INDICATOR - AC VOLT, FREQUENCY
101-380013-13	FLOW CONTROL VALVE	101-384135-3	BLOWER ASSY
101-380013-15	FLOW CONTROL VALVE	101-384137-5	SWITCH ASSEMBLY
101-380013-17	FLOW CONTROL VALVE	101-384137-7	SWITCH ASSEMBLY
101-380013-3	PNEUMOSTAT	101-384176-1	VENTILATING BLOWER ASSEMBLY
101-380025-11	FLOW CONTROL VALVE	101-384176-3	VENTILATING BLOWER ASSEMBLY
101-380025-17	FLOW CONTROL VALVE	101-389007-1	STARTER GENERATOR

QUICK REFERENCE



OVERHAULED PART - VALVE, FUEL SHUTOFF 101-389025-5

COMES WITH:

2 EACH

MS29513-215

  O RINGS

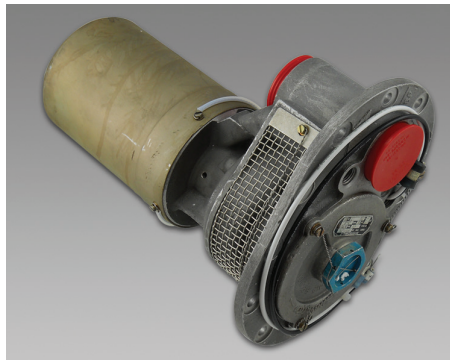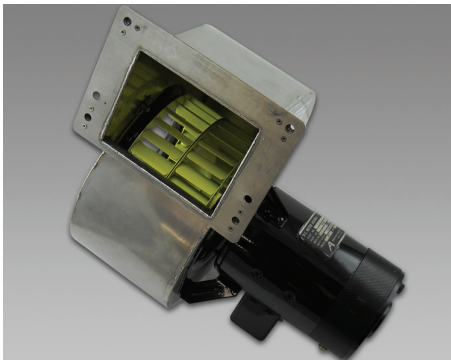

101-389025-5

VALVE, FUEL SHUTOFF

101-389042-5

FUEL FLOW TRANSMITTER

101-389044-3

TORQUE TRANSMITTER

101-8001-47

WHEEL ASSEMBLY

101-8001-91

BRAKE ASSEMBLY

101-8002-3

BRAKE ASSEMBLY

101-8002-57

WHEEL ASSEMBLY

10201-1

STALL DETECTOR

10379-11-01

ALTITUDE ALERTER

104968

VALVE

1103KSDBU1

SWITCH, ALTITUDE

1159000-1

VALVE, PRESSURE RELIEF

132322-3-1

FAN VENTURI

140-380020-0001

CONTACTOR

150-10B

VALVE

150-9A

VALVE

1703-12

VANE UNIT

174260-04

18C2

1U149-001-6

2070C01

2070C11

2100901-2

2132-1-13

2-1576

2-1674-1

23048-016

23076-004-1

23080-005

23080-064

23085-025

23085-029

25-6MC415

25-8CW159AB

OXYGEN MASK QUICK DONNING

INERTIA SWITCH

GYRO HORIZON

FUEL BOOST PUMP

FUEL BOOST PUMP

BLOWER

AMMETER, DC

BRAKE ASSEMBLY

BRAKE ASSEMBLY

STARTER GENERATOR

STARTER GENERATOR

STARTER GENERATOR

STARTER GENERATOR

STARTER GENERATOR

STARTER GENERATOR

SELECTOR TEMPERATURE

FLAP SCREWJACK, RH

QUICK REFERENCE

BOOST PUMPS 2070C01, 2070C11

WILL REQUIRE:

1 EACH

100-028-5611

100-110-5611

 
100-125-5611

SEALS

1 EACH

25PF567

GASKETS

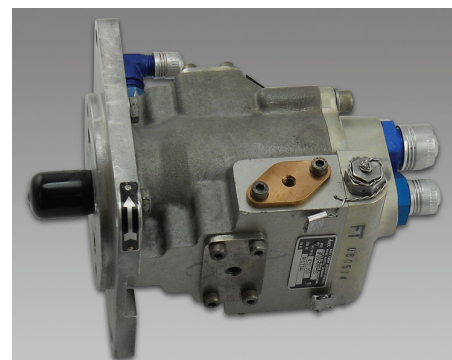

25-8CW161AB

FLAP SCREWJACK, LH

27441482

VALVE

2C40-2

FUEL BOOST PUMP

30-0516-1

TAIL STROBE/NAVIGATION LIGHT

30-1331-3

STROBE LIGHT

3038495

NOZZLE

30400018-1

FIRE EXTINGUISHER

3-1543-1

WHEEL ASSY MLG

321292-1

VALVE, SHUT-OFF

3213788-1-1

VALVE, BLEED AIR MIXER

321776-1-1

VALVE, BY-PASS

33200002

FIRE EXTINGUISHER

33200002-3

FIRE EXTINGUISHER

33200009-3

FIRE EXTINGUISHER

3514100-262

SWITCH, TANK

390-382045-0001

OXYGEN MASK

42022-03

PUMP, HYDRAULIC

4206-100-V2

RADOME W/BOOT INSTALLED

4404-00-7NV

FUEL BOOST PUMP

45C3-111

FAN

507-1228-04

EMERGENCY BATTERY

501-1235-01

INVERTER

501-1826-01

MAGNETOMETER

50-380034-3

TURBINE INDICATOR

50-380040-1

COIL

50-380177-5

FUEL PUMP

50-810164-17

ACTUATOR ASSEMBLY, MAIN

50-810164-18

ACTUATOR ASSEMBLY, MAIN

50-820208-5

ACTUATOR ASSEMBLY, NOSE

51509-006C

GENERATOR CONTROL UNIT

 
 
51538-001A

GENERATOR CONTROL UNIT

51539-006H

GENERATOR CONTROL UNIT

QUICK REFERENCE

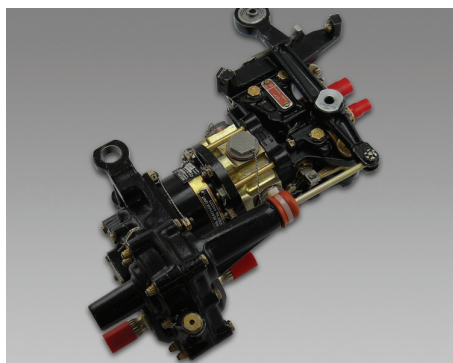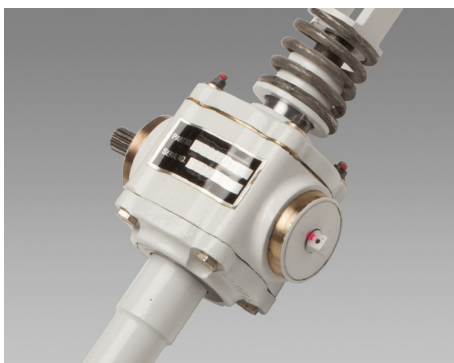

5453511-11

FAN FLAP ACTUATOR

5453512-19

ACTUATOR ASSEMBLY

5453512-20

ACTUATOR ASSEMBLY

5934PAD-3A.260

ALTIMETER, LIGHTED

5D700-000

OIL COOLER

614MK2

FLAP CONTROL UNIT

617MK4

FLAP POSITION UNIT

65WE01030-3-6

PUMP, HYDRAULIC

701571

POWER SUPPLY

7040-C110

VSI 0-4000 LIGHTED 5V

7907015E

VALVE

8060-160

STARTER GENERATOR

8180-2

OIL COOLER

894-20330

PORTABLE OXYGEN SYSTEM

90-380009-7

FUEL FLOW TRANSMITTER

90-380033-3

INDICATOR, ITT

90-380033-5

INDICATOR, ITT

90-380034-5

INDICATOR, TORQUE

90-380035-5

INDICATOR, PROP TACH

90-380037-1

INDICATOR, FUEL FLOW

90-380038-1

BRAKE ASSEMBLY

97-380000-17

THERMOSTAT

97-380000-33

FLOW CONTROL VALVE

99-810057-653

ACTUATOR ASSEMBLY - MLG

99-810057-654

ACTUATOR ASSEMBLY - MLG

99-820100-5

CYLINDER ASSEMBLY - NLG

A4503M9-5

LANDING GEAR CONTROL

A703FSS

RELAY

AC65216

MAXARET

AC65218

MAXARET

AC67732

BRAKE CONTROL VALVE

AC69784

EMERGENCY BRAKE VALVE

ACM26274

MASTER BRAKE CYLINDER

AH089443

HEAT PACK - HAWKER 400 SERIES

QUICK REFERENCE

DUNLOP MAXARETS AC65216, AC65218

COMES WITH:

2 EACH



DAS2100-2

RING

2 EACH

DAS2138-2

  SEAL

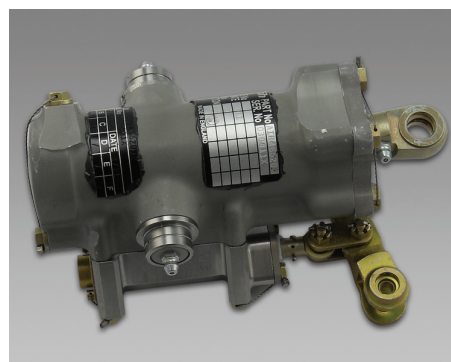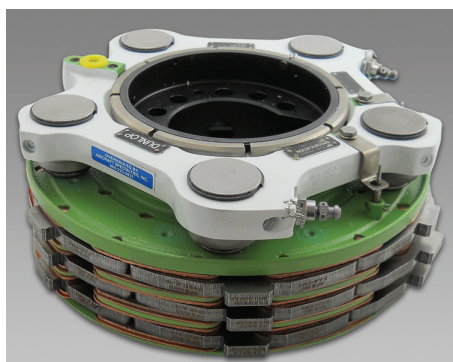

AH089444

HEAT PACK - HAWKER 600-700 SERIES

AH089881

HEAT PACK - HAWKER 800 SERIES

AH089964

HEAT PACK - HAWKER 1000 SERIES

AH52787

BRAKE - HAWKER 700 SERIES

AHA1870

BRAKE - HAWKER 1000 SERIES

AHA1881

MAIN WHEEL HAWKER 1000

AHA1897

BRAKE - HAWKER 800 SERIES

AIR45392-0

VALVE

AIR45394-0

VALVE

AIR45396-7

ACTUATOR, STEERING

AIR45404-1

JACK, NLG

AIR45406-1

VALVE, NLG SELECTOR

AIR45474-0

VALVE, PRESSURE MAINTAINING

AIR45574-4

ACCUMULATOR

AIR46520-2

AIRBRAKE ACTUATOR

AIR46521-2

AIRBRAKE ACTUATOR

AIR48484-3

DOOR JACK, RH MLG

AIR48485-3

AIR48502-7

AIR48503-7

AIR48540-1

AIR48542-1

AIR48543-1

AL-0581

B01A214128A

B31WA3010-053

BA00501-1

BA02801-1

BH185R-280A

CG8104013356N00

CG8104013446N00

CG8106013356N00

CH0378103392B00

DK120

DOOR JACK, LH MLG

MAIN U/C JACK ASSEMBLY

MAIN U/C JACK ASSEMBLY

VALVE, SEQUENCE

REVERSING VALVE, LH

REVERSING VALVE, RH

INVERTER

SHUT-OFF VALVE

COAL CUR ASSY

ALTERNATOR

ALTERNATOR

INDICATOR, ITT

FILTER

FILTER

FILTER

FILTER

BEACON

QUICK REFERENCE



DSF1291-5

INDICATOR, FUEL FLOW

G9950-1

BEACON ASSEMBLY, UPPER

G9950-21

BEACON ASSEMBLY, LOWER

H330

INDICATOR, N1

H330C

INDICATOR, N1

H901-254

INDICATOR

*HC-E4A-3D/
E10477SK*

PROPELLER

HTE1984-1

VALVE, FUEL

HTE9044-001

ACTUATOR

HYLZ50336-011

CABIN TEMP CONTROLLER

HYLZ50336-1

CABIN TEMP CONTROLLER

LDA150A8C

CONTACTOR

LDA200B18C

CONTACTOR

LDG150Y4

CONTACTOR

MC10-06-125

OXYGEN MASK

MC10-14-124

OXYGEN MASK

MF10-03-02

OXYGEN MASK

NF0075-667

ICE DETECTOR

P8104

FILTER

S132-3-22

FLAP POSITION TRANSMITTER

SPSF2M8-1-0

WINDOW

SPSF2M8-3-0

WINDOW

SPSF900-8-6-0

WINDOW

TFF1573-2

TRANSMITTER

TP42000

SWITCH

TP42001

SWITCH, BRAKE PRES

UL32-040-SP1

HYDRO LOCK

WKA31393-1

OXYGEN BOTTLE

QUICK REFERENCE

RETURNS AND WARRANTY

NEW PART RETURN POLICY

For your benefit we have enclosed our return policy, exchange sale policy and core policy. If it becomes necessary for you to return a component purchased from Western Aircraft, Inc., we will be able to respond to your claim more efficiently if you follow these guidelines.

- Requests to return components must be made within 30 days from date of shipment.
- Reports of shortages, overages, part damages, or part discrepancies in a shipment must be made within 10 days from Invoice Date.
- Normal handling charges are 15% (\$50.00 minimum/\$500.00 maximum per line item) on stock items. All other parts are subject to the vendors restocking charges. Any part removed from a sealed protective packaging will also incur a recertification fee.
- All returns must have prior approval to return and must reference the pre-approved RA number. Returns will be shipped with all freight and custom charges prepaid. Items received without a return authorization number will be denied & returned to the customer freight collect.
- Original documentation, which includes all CAA/FAA Airworthiness Documentation furnished with original shipment, must accompany the part otherwise no credit will be issued.
- Please reuse the original packing material/methods where possible.
- Literature items are not acceptable for return.
- It is the responsibility of the recipient to notify the carrier and submit a freight claim for any damage to the shipment. A copy of your claim and/or correspondence with the carrier must be submitted to Western Aircraft.
- Statically sealed items must be returned unopened.

For return approval, please contact any of the Western Aircraft, Inc. customer service representatives at 1.800.777.4926 or Fax to 208.338.1819.

EXCHANGE SALE AND CORE POLICY

- Core returns are due within 14 days domestic and 21 days international from the date the exchange unit was shipped. Late return of a core unit will result in a late return penalty of a 2% daily charge of the exchange billing. This charge will incur daily until the core unit is received. If the core unit has not been returned after 60 days from the date of shipment, the core deposit will be billed and the sale considered outright. Late return fees will still apply.
- Cores must be returned with either the Western Aircraft vendor "core return form" or vendor core documentation filled out in full. Failure to provide service data information can result in core rejection.
- Cores returned that are beyond economical repair (BER), lacking completed core tags, damaged, disassembled, or not a like part number, can incur over and above standard overhaul cost or core rejection. Rejected cores will be returned to the customer at their expense. Western Aircraft will not be responsible for parts lost or damaged during shipment.
- Vendor core policies shall supersede Western Aircraft, Inc.'s policy as applicable.
- It is the responsibility of the customer to provide proof of shipment and delivery for any outstanding cores due.
- All units containing fluids should be completely drained and capped to prevent leaking during shipment and must comply with hazardous material shipping regulations.

For core questions or issues, please contact Western Aircraft, Inc. rotatable administrator at 208.338.1822.

Any collect shipments will be refused. Cores and part returns are to be returned prepaid to:

WESTERN AIRCRAFT

Attn: Returns
4416 S. Kennedy St.
Boise, ID 83705

RETURNS AND WARRANTY

PART WARRANTY POLICY

- *Western Aircraft, Inc. will, at our discretion, repair, replace, or refund the purchase of goods found defective during the warranty period. Western Aircraft, Inc. will warrant new, overhauled, or repaired parts for a period of 90 days or 150 hours, which ever comes first, from the date of shipment. Western Aircraft will honor any vendor(s) warranties that extend beyond that of Western Aircraft, Inc. and is subject to that vendor(s) warranty policy. All warranties are subject to final approval pending inspection and acceptance by our vendor(s).*
- *In no event shall Western Aircraft, Inc. be liable for consequential damages or extraneous damages resulting from the failure of any unit supplied.*
- *Western Aircraft reserves the right to refuse warranty in the case of tampering, negligence, misuse, alteration, breaking of vendor warranty seals, mishandling, or any damage that occurs as a consequence of shipping.*
- *Western Aircraft reserves the right to pass along cost that may incur from the vendor(s) for pro-rated warranty or any warranty that is denied.*
- *Western Aircraft is not responsible for any cost incurred, including labor, for the installation or removal of a failed part or freight charges.*
- *All warranty returns must have prior approval and must reference the pre-approved RA number. A complete warranty claim form must be filled out and returned with the failed unit. All warranty claims must be made within 30 days from the discovery of defect. Any part returned without complete warranty information can be denied warranty if required information is not received within the 30 day time period.*
- *In cases where a warranty exchange unit as been provided, the warranty will not extend beyond the original warranty period in question.*

For return approval, please contact any of the Western Aircraft, Inc. customer service representatives at 1.800.777.4926 or fax to 208.338.1819.

For warranty questions please contact Western Aircraft, Inc. Rotable Administrator at 208.338.1822.

Any collect shipments will be refused. Warranty returns are to be returned prepaid to:

WESTERN AIRCRAFT

*Attn: Returns
4416 S. Kennedy St.
Boise, ID 83705*

Western Aircraft

4300 S. Kennedy St.

Boise, ID 83705

800.777.4926

westair.com